

## **LED Tri-proof Batten Light with Sensor** | 20W





Motion+daylight sensor Detection area: 2.5-4 metres Hold on time: OFF/30s/10min/30min With remote control

### Shenzhen ERS Technology Factory Add: C209, Boohuasen International Center, Qianjin Second

Road, Xixiang Town, Bao'an District,Shenzhen, China

Warehouse Add: 57 Tamard Dr, Braeside VIC 3195

**Tel:** 048 470 3010

















#### **APPLICATION**

Indoor and outdoor lighting, with IP65, it can be used at chick en farm, basement, car pariking, warehouses, corridors, outside of building, etc



#### **SPECIFICATIONS**

Item No.	ERS-BR20W120S
Product Size (mm)	1200X96X83
Power	20W
Lumen	3000lm
Sensor	Daylight & Microwave Motion Sensor, Sensing distance 2.5–4m
Input Voltage	AC220-240V, 50Hz
Opal Diffuser Material	PC
Body Material	PC
Body Colour	Grey
Clips	stainless steel clips
Driver Brand	ERS driver (3 years warranty)
Efficiency	150lm/w
LED Type	SMD 2835
ССТ	3000K,4000K,5000K,5700K
CRI	Ra > 80
Power Factor	> 0.9
Beam Angle	120°
IP Rating	IP65
Working Temperature	-20°C~+45°C
Warranty	3 years

# Shenzhen ERS Technology Factory Add: C209, Boohuasen International Center, Qianjin Second

Road, Xixiang Town, Bao'an District, Shenzhen, China

Warehouse Add: 57 Tarnard Dr, Braeside VIC 3195

**Tel:** 048 470 3010



















#### LED MANUNAL INSTRTION




- Installation should be done by registered electricians.
- Before replacing the driver, please switch off the power supply and wait until it cools down completely.
- 3 Never touch the working luminaire
- In any case of malfunction, switch off the power supply immediately, and do not try to repair it yourself.
- 6 Repairment should only be done by registered electricians or official service agent.

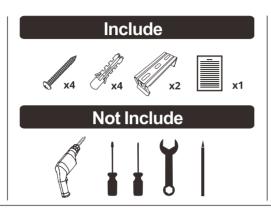


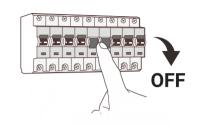


1. Switch off the power supply before installation.

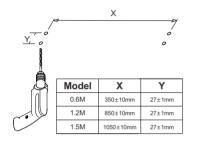


2.Drill a 6mm hole.

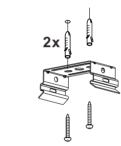


3. According to the fixing hole centre, install expansion bolts and screws, install the bracket.

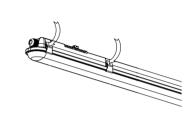

 
4. Unbuckle the clips, take out the diffuser.



 
5.Connect wires from lamp side: Install the terminal strip on the side, then connect wires ,L to L, N to N, GND to GND.



6.Connect wires from middle: Remove the terminal strip from side part, and install it to the middle, then connect wires,L to L, N to N, GND to GND.

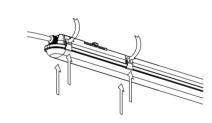


7.Close the luminaire.

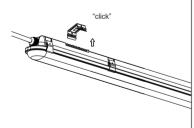

8. Fix the luminaire with the brackets.



 9. Switch off the power supply before installation.



10 Finish installation

# Shenzhen ERS Technology Factory Add: C209, Boohuasen International Center, Qianjin Second

Road, Xixiang Town, Bao'an District,Shenzhen, China

Warehouse Add: 57 Tarnard Dr, Braeside VIC 3195

Tel: 048 470 3010

















#### **PACKING**

Item No.	ERS-BR16/20/24/36/40W120S
Carton Size (mm)	1212X210X267
N.W.(KG)	7
G.W. (KG)	8.9
QTY/CTN	6

Factory Add: C209, Baohuasen International Center, Qianjin Second Road, Xixiang Town, Bao'an District,Shenzhen, China Warehouse Add: 57 Tarnard Dr, Braeside VIC 3195

**Tel:** 048 470 3010


















#### **DETAILS**



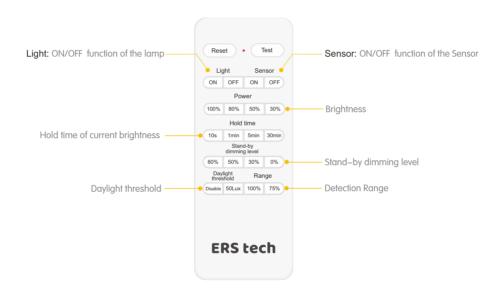



### **Shenzhen ERS Technology**

Factory Add: C209, Bachuasen International Center, Qianjin Second Road, Xixiang Town, Bac'an District, Shenzhen, China Warehouse Add: 57 Tarnard Dr, Braeside VIC 3195

**Tel:** 048 470 3010













