

LED Tri-proof Batten Light with Sensor | 36W





Motion+daylight sensor Detection area: 2.5-4 metres Hold on time: OFF/30s/10min/30min With remote control

Shenzhen ERS Technology

Factory Add: C209, Bachuasen International Center, Qianjin Second Road, Xixiang Town, Bac'an District, Shenzhen, China Warehouse Add: 57 Tarnard Dr, Braeside VIC 3195

Tel: 048 470 3010

















APPLICATION

Indoor and outdoor lighting, with IP65, it can be used at chick en farm, basement, car pariking, warehouses, corridors, outside of building, etc



SPECIFICATIONS

ERS-BR36W120S
1200X96X83
36W
5400lm
Daylight & Microwave Motion Sensor, Sensing distance 2.5–4m
AC220-240V, 50Hz
PC
PC
Grey
stainless steel clips
ERS driver (3 years warranty)
150lm/w
SMD 2835
3000K,4000K,5000K,5700K
Ra > 80
> 0.9
120°
IP65
-20°C~+45°C
3 years

Shenzhen ERS Technology Factory Add: C209, Boohuasen International Center, Qianjin Second

Road, Xixiang Town, Bao'an District, Shenzhen, China

Warehouse Add: 57 Tarnard Dr, Braeside VIC 3195

Tel: 048 470 3010



















LED MANUNAL INSTRTION




- Installation should be done by registered electricians.
- Before replacing the driver, please switch off the power supply and wait until it cools down completely.
- 3 Never touch the working luminaire
- In any case of malfunction, switch off the power supply immediately, and do not try to repair it yourself.
- 6 Repairment should only be done by registered electricians or official service agent.

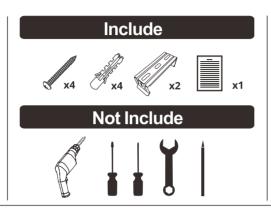


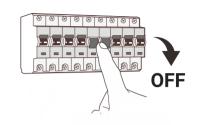


1. Switch off the power supply before installation.

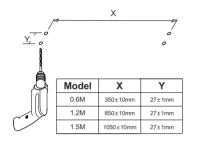


2.Drill a 6mm hole.

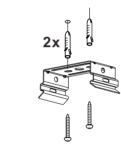


3. According to the fixing hole centre, install expansion bolts and screws, install the bracket.

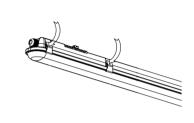

 
4. Unbuckle the clips, take out the diffuser.



 
5.Connect wires from lamp side: Install the terminal strip on the side, then connect wires ,L to L, N to N, GND to GND.



6.Connect wires from middle: Remove the terminal strip from side part, and install it to the middle, then connect wires,L to L, N to N, GND to GND.

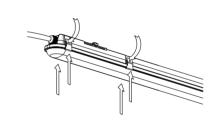


7.Close the luminaire.

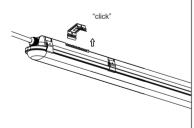

8. Fix the luminaire with the brackets.



 9. Switch off the power supply before installation.



10 Finish installation

Shenzhen ERS Technology Factory Add: C209, Boohuasen International Center, Qianjin Second

Road, Xixiang Town, Bao'an District,Shenzhen, China

Warehouse Add: 57 Tarnard Dr, Braeside VIC 3195

Tel: 048 470 3010

















PACKING

Item No.	ERS-BR16/20/24/36/40W120S
Carton Size (mm)	1212X210X267
N.W.(KG)	7
G.W. (KG)	8.9
QTY/CTN	6

Factory Add: C209, Baohuasen International Center, Qianjin Second Road, Xixiang Town, Bao'an District,Shenzhen, China Warehouse Add: 57 Tarnard Dr, Braeside VIC 3195

Tel: 048 470 3010


















DETAILS



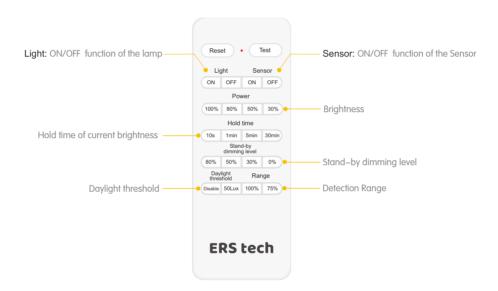



Shenzhen ERS Technology

Factory Add: C209, Baohuasen International Center, Qianjin Second Road, Xixiang Town, Bao'an District, Shenzhen, China Warehouse Add: 57 Tamard Dr, Braeside VIC 3195

Tel: 048 470 3010













