

LED Tri-proof Batten Light with Sensor | 48W





Motion+daylight sensor Detection area: 2.5-4 metres Hold on time: OFF/30s/10min/30min With remote control

Shenzhen ERS Technology Factory Add: C209, Boohuasen International Center, Qianjin Second

Road, Xixiang Town, Bao'an District,Shenzhen, China

Warehouse Add: 57 Tamard Dr, Braeside VIC 3195

Tel: 048 470 3010

















APPLICATION

Indoor and outdoor lighting, with IP65, it can be used at chick en farm, basement, car pariking, warehouses, corridors, outside of building, etc



SPECIFICATIONS

Item No.	ERS-BR48W150S
Product Size (mm)	1500X96X83
Power	48W
Lumen	7200lm
Sensor	Daylight & Microwave Motion Sensor, Sensing distance 2.5–4m
nput Voltage	AC220-240V, 50Hz
Opal Diffuser Material	PC
Body Material	PC
Body Colour	Grey
Clips	stainless steel clips
Driver Brand	ERS driver (3 years warranty)
Efficiency	150lm/w
.ED Type	SMD 2835
ССТ	3000K,4000K,5000K,5700K
CRI	Ra > 80
Power Factor	> 0.9
Beam Angle	120°
P Rating	IP65
Working Temperature	-20°C~+45°C
Warranty	3 years

Shenzhen ERS Technology Factory Add: C209, Boohuasen International Center, Qianjin Second

Road, Xixiang Town, Bao'an District, Shenzhen, China

Warehouse Add: 57 Tarnard Dr, Braeside VIC 3195

Tel: 048 470 3010



















LED MANUNAL INSTRTION




- Installation should be done by registered electricians.
- Before replacing the driver, please switch off the power supply and wait until it cools down completely.
- 3 Never touch the working luminaire
- In any case of malfunction, switch off the power supply immediately, and do not try to repair it yourself.
- 6 Repairment should only be done by registered electricians or official service agent.

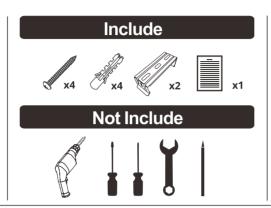


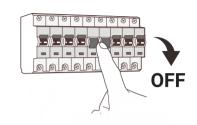


1. Switch off the power supply before installation.

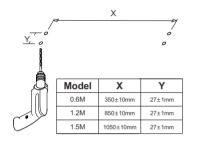


2.Drill a 6mm hole.

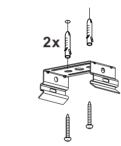


3. According to the fixing hole centre, install expansion bolts and screws, install the bracket.

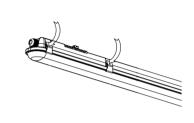

 
4. Unbuckle the clips, take out the diffuser.



 
5.Connect wires from lamp side: Install the terminal strip on the side, then connect wires ,L to L, N to N, GND to GND.



6.Connect wires from middle: Remove the terminal strip from side part, and install it to the middle, then connect wires,L to L, N to N, GND to GND.

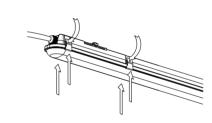


7.Close the luminaire.

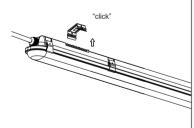

8. Fix the luminaire with the brackets.



 9. Switch off the power supply before installation.



10 Finish installation

Shenzhen ERS Technology Factory Add: C209, Boohuasen International Center, Qianjin Second

Road, Xixiang Town, Bao'an District,Shenzhen, China

Warehouse Add: 57 Tarnard Dr, Braeside VIC 3195

Tel: 048 470 3010

















PACKING

Item No.	ERS-BR48/50/54/60W150S
Carton Size (mm)	1512X210X267
N.W.(KG)	8.7
G.W. (KG)	11.2
QTY/CTN	6

Road, Xixiang Town, Bao'an District, Shenzhen, China

Warehouse Add: 57 Tamard Dr, Braeside VIC 3195

Tel: 048 470 3010


















DETAILS



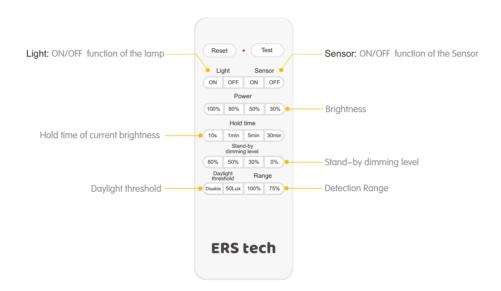



Shenzhen ERS Technology

Factory Add: C209, Bachuasen International Center, Qianjin Second Road, Xixiang Town, Bac'an District, Shenzhen, China Warehouse Add: 57 Tarnard Dr, Braeside VIC 3195

Tel: 048 470 3010













