 


LED Tri-proof Batten Light | 18W

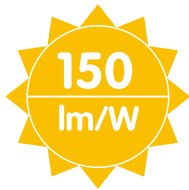

Shenzhen ERS Technology

Factory Add: C209, Baohuasen International Center, Qianjin Second Road, Xixiang Town, Bao'an District, Shenzhen, China

Warehouse Add: 57 Tarnard Dr, Braeside VIC 3195

Tel: 048 470 3010

Email: info@erstech.com.au



IPART
Independent Pricing and Regulatory Tribunal
New South Wales



Victorian
Energy
Upgrades



LM-80 TM 21 LM 79
ISTMT LCP



APPLICATION

Indoor and outdoor lighting, with IP65, it can be used at chick en farm, basement, car parking, warehouses, corridors, outside of building, etc



SPECIFICATIONS

Item No.	ERS-TRI18W
Product Size (mm)	1207X91X78
Power	18W
Input Voltage	AC220-240V, 50Hz
Opal Diffuser Material	PC
Body Mateial	PC
Body Colour	Grey
Clips	stainless steel clips
Driver Brand	PHILIPS Element non-isolated driver 3 years warranty
Efficiency	150lm/w
LED Type	SMD 2835
CCT	3000K, 4000K, 5000K, 6500K
CRI	Ra > 80
Power Factor	> 0.9
Beam Angle	120°
IP Rating	IP65
Warranty	3 years
VEET	Approved
IPART	Approved

Shenzhen ERS Technology

Factory Add: C209, Baohuasen International Center, Qianjin Second Road, Xixiang Town, Bao'an District, Shenzhen, China
Warehouse Add: 57 Tarnard Dr, Braeside VIC 3195

Tel: 048 470 3010

Email: info@erstech.com.au



IPART
Independent Pricing and Regulatory Tribunal
New South Wales



LM-80 TM 21 LM 79
ISTMT LCP



Victorian
Energy
Upgrades



ESSENTIAL SERVICES COMMISSION

 
LED MANUAL INSTRUCTION




Safety Notice:

- ① Installation should be done by registered electricians.
- ② Before replacing the driver, please switch off the power supply and wait until it cools down completely.
- ③ Never touch the working luminaire
- ④ In any case of malfunction, switch off the power supply immediately, and do not try to repair it yourself.
- ⑤ Repairment should only be done by registered electricians or official service agent.


Include



Not Include

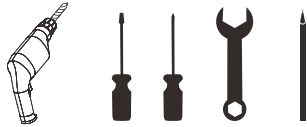 

Model	Power	Fixing Hole Centre
ERS-TRI12W	12W	280mm
ERS-TRI24W	24W	770mm
ERS-TRI36W	36W	770mm

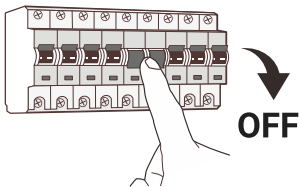 


WARNING


Switch off the power supply before installation



 
1. Drill a $\varnothing 6\text{mm}$ hole



 
3. Fix the luminaire with the brackets

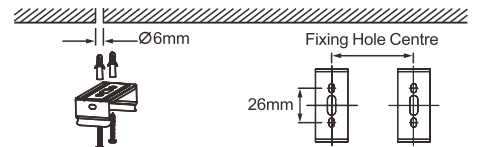

 
2. According to the Fixing hole centre, install expansion bolts and screws, install the bracket.



 
4. Finish installation

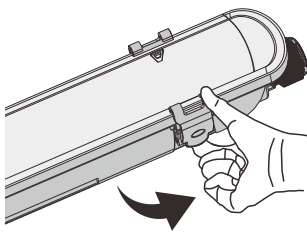

 
1. Unbuckle the clips

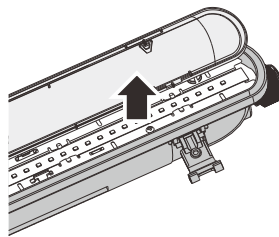

 
2. Take out of the diffuser

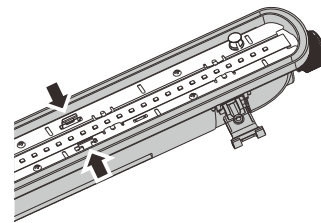

 
3. Push down the U brackets

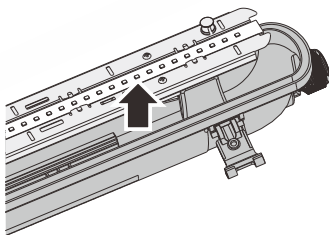

 4. Take out of the LED module

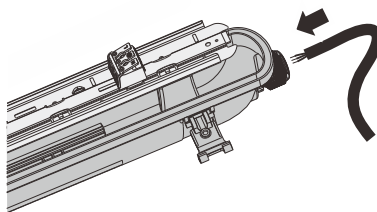

 5. Insert the cable through the cable gland

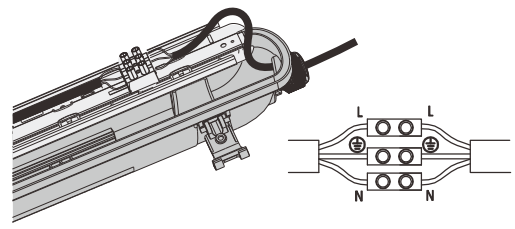

6. Connect the wires, L to L, N to N, \ominus to \ominus

Shenzhen ERS Technology

Factory Add: C209, Baohuasen International Center, Qianjin Second Road, Xixiang Town, Bao'an District, Shenzhen, China
Warehouse Add: 57 Tarnard Dr, Braeside VIC 3195

Tel: 048 470 3010

Email: info@erstech.com.au



IPART
Independent Pricing and Regulatory Tribunal
New South Wales




Victorian Energy Upgrades




LM-80 TM 21 LM 79
ISTMT LCP




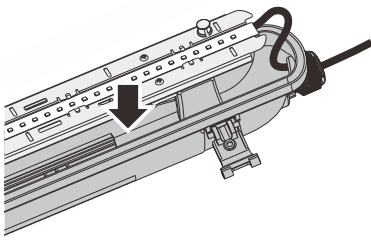

 7. Put back the LED module

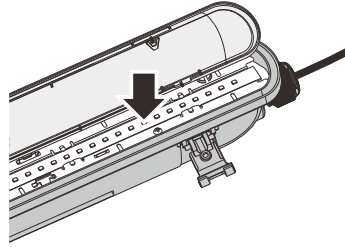



8. Close the luminaire

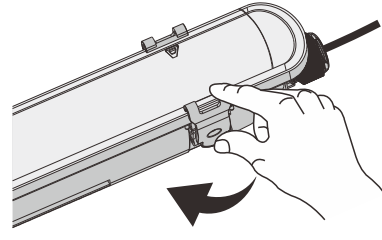

9. Buckle the clips

WARNING

  Switch off the power supply before installation

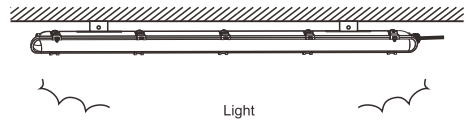
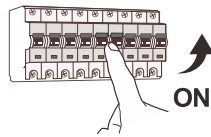


Light

PACKING

N.W.(KG)	G.W.(KG)	CARTON SIZE(mm)	QTN/CTN
12.6	14.6	1225X290X260	9

  Package size (1200mm item)

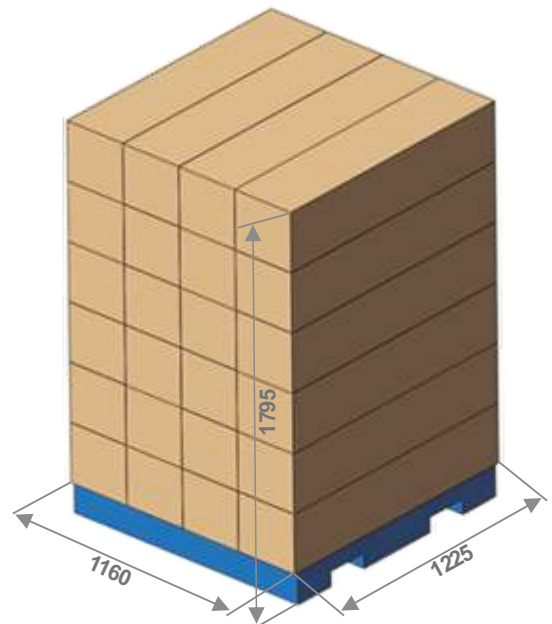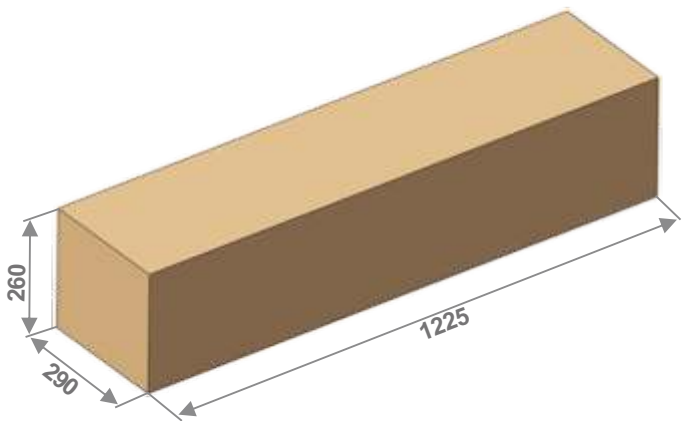

Shenzhen ERS Technology

Factory Add: C209, Baohuasen International Center, Qianjin Second Road, Xixiang Town, Bao'an District, Shenzhen, China
Warehouse Add: 57 Tarnard Dr, Braeside VIC 3195

Tel: 048 470 3010

Email: info@erstech.com.au



IPART
Independent Pricing and Regulatory Tribunal
New South Wales



LM-80 TM 21 LM 79
ISTMT LCP



Victorian
Energy
Upgrades



ESSENTIAL SERVICES COMMISSION