

LED Emergency Tri-proof Batten Light | 12W

150
lm/W



Shenzhen ERS Technology

Factory Add: C209, Baohuasen International Center, Qianjin Second Road, Xixiang Town, Bao'an District, Shenzhen, China
Warehouse Add: 57 Tarnard Dr, Braeside VIC 3195

Tel: 048 470 3010
Email: info@erstech.com.au



IPART
Independent Pricing and Regulatory Tribunal
New South Wales



Victorian
Energy
Upgrades



LM-80 TM 21 LM 79
ISTMT LCP



APPLICATION

Indoor and outdoor lighting, with IP 65, it can be used at chick en farm, basement, car parking, warehouses, corridors, outside of building, etc



SPECIFICATIONS

Item No.	ERS-BR12W60E
Product Size (mm)	600X96X83
Power	12W
Lumen	1800lm
Emergency Power And Time	4W > 90min
Input Voltage	AC220-240V, 50Hz
Opal Diffuser Material	PC
Body Mateial	PC
Body Colour	Grey
Clips	stainless steel clips
Driver Brand	ERS driver (3 years warranty)
Efficiency	150lm/w
LED Type	SMD 2835
CCT	3000K,4000K,5000K,5700K
CRI	Ra > 80
Power Factor	> 0.9
Beam Angle	120°
IP Rating	IP65
Working Temperature	-20°C~+45°C
Warranty	3 years

Shenzhen ERS Technology

Factory Add: C209, Baohuasen International Center, Qianjin Second Road, Xixiang Town, Bao'an District, Shenzhen, China
Warehouse Add: 57 Tarnard Dr, Braeside VIC 3195

Tel: 048 470 3010

Email: info@erstech.com.au



Victorian Energy Upgrades



LM-80 TM 21 LM 79
ISTMT LCP




LED MANUAL INSTRUCTION





Safety Notice:

- ① Installation should be done by registered electricians.
- ② Before replacing the driver, please switch off the power supply and wait until it cools down completely.
- ③ Never touch the working luminaire
- ④ In any case of malfunction, switch off the power supply immediately, and do not try to repair it yourself.
- ⑤ Repairment should only be done by registered electricians or official service agent.


Include

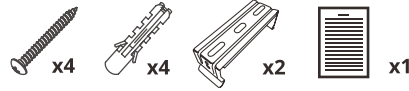


Not Include

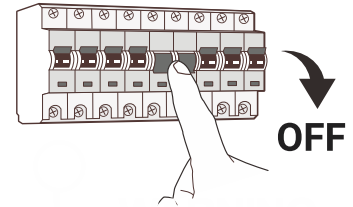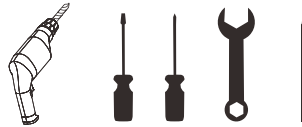


1. Switch off the power supply before installation.

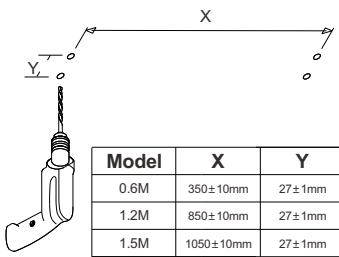


2. Drill a 6mm hole.

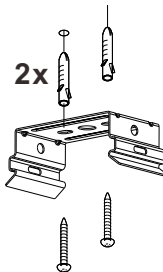


3. According to the fixing hole centre, install expansion bolts and screws, install the bracket.

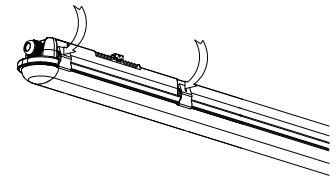


4. Unbuckle the clips, take out the diffuser.

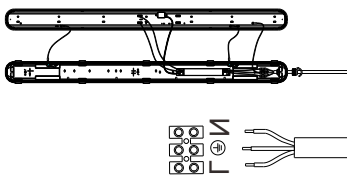


5. Connect wires from lamp side: Install the terminal strip on the side, then connect wires, L to L, N to N, GND to GND.

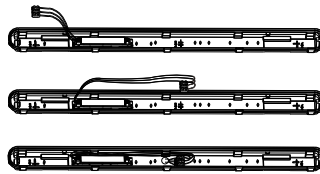


6. Connect wires from middle: Remove the terminal strip from side part, and install it to the middle, then connect wires, L to L, N to N, GND to GND.

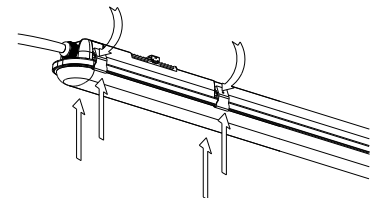

7. Close the luminaire.

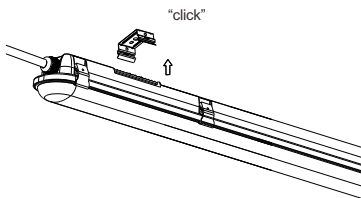

8. Fix the luminaire with the brackets.

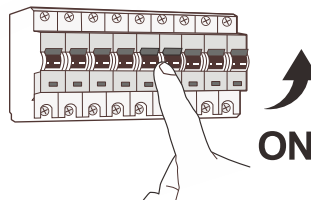

9. Switch off the power supply before installation.



10. Finish installation.

Shenzhen ERS Technology

Factory Add: C209, Baohuasen International Center, Qianjin Second Road, Xixiang Town, Bao'an District, Shenzhen, China
Warehouse Add: 57 Tarnard Dr, Braeside VIC 3195

Tel: 048 470 3010

Email: info@erstech.com.au



IPART
Independent Pricing and Regulatory Tribunal
New South Wales



Victorian
Energy
Upgrades



LM-80 TM 21 LM 79
ISTMT LCP



PACKING

Item No.	ERS-BR12/18W60E
Carton Size (mm)	612X210X267
N.W.(KG)	
G.W. (KG)	
QTY/CTN	6

Shenzhen ERS Technology

Factory Add: C209, Baohuasen International Center, Qianjin Second Road, Xixiang Town, Bao'an District, Shenzhen, China

Warehouse Add: 57 Tarnard Dr, Braeside VIC 3195

Tel: 048 470 3010

Email: info@erstech.com.au



IPART
Independent Pricing and Regulatory Tribunal
New South Wales



LM-80 TM 21 LM 79
ISTMT LCP



Victorian Energy Upgrades



ESSENTIAL SERVICES COMMISSION