

## LED Emergency Tri-proof Batten Light | 48W

150  
lm/W



### Shenzhen ERS Technology

Factory Add: C209, Baohuasen International Center, Qianjin Second Road, Xixiang Town, Bao'an District, Shenzhen, China  
Warehouse Add: 57 Tarnard Dr, Braeside VIC 3195

Tel: 048 470 3010  
Email: [info@erstech.com.au](mailto:info@erstech.com.au)



IPART  
Independent Pricing and Regulatory Tribunal  
New South Wales



Victorian  
Energy  
Upgrades



LM-80 TM 21 LM 79  
ISTMT LCP



## APPLICATION

Indoor and outdoor lighting, with IP 65, it can be used at chick en farm, basement, car parking, warehouses, corridors, outside of building, etc



## SPECIFICATIONS

Item No.	ERS-BR48W150E
Product Size (mm)	1500X96X83
Power	48W
Lumen	7200lm
Emergency Power And Time	4W > 90min
Input Voltage	AC220-240V, 50Hz
Opal Diffuser Material	PC
Body Mateial	PC
Body Colour	Grey
Clips	stainless steel clips
Driver Brand	ERS driver (3 years warranty)
Efficiency	150lm/w
LED Type	SMD 2835
CCT	3000K,4000K,5000K,5700K
CRI	Ra > 80
Power Factor	> 0.9
Beam Angle	120°
IP Rating	IP65
Working Temperature	-20°C~+45°C
Warranty	3 years

## Shenzhen ERS Technology

Factory Add: C209, Baohuasen International Center, Qianjin Second Road, Xixiang Town, Bao'an District, Shenzhen, China  
Warehouse Add: 57 Tarnard Dr, Braeside VIC 3195

Tel: 048 470 3010

Email: [info@erstech.com.au](mailto:info@erstech.com.au)



IPART  
Independent Pricing and Regulatory Tribunal  
New South Wales



Victorian  
Energy  
Upgrades



LM-80 TM 21 LM 79  
ISTMT LCP




## LED MANUAL INSTRUCTION





### Safety Notice:

- ❶ Installation should be done by registered electricians.
- ❷ Before replacing the driver, please switch off the power supply and wait until it cools down completely.
- ❸ Never touch the working luminaire
- ❹ In any case of malfunction, switch off the power supply immediately, and do not try to repair it yourself.
- ❺ Repairment should only be done by registered electricians or official service agent.


### Include

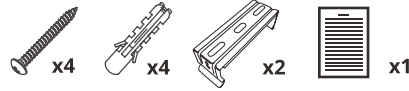


### Not Include

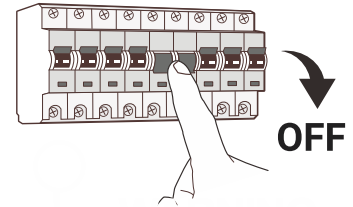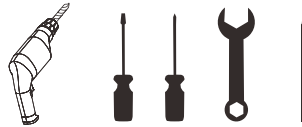  

 
1. Switch off the power supply before installation.

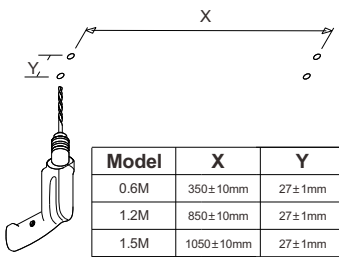


2. Drill a 6mm hole.

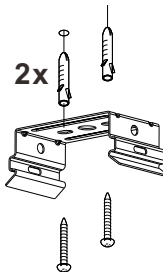

 
3. According to the fixing hole centre, install expansion bolts and screws, install the bracket.

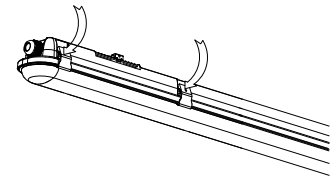


4. Unbuckle the clips, take out the diffuser.

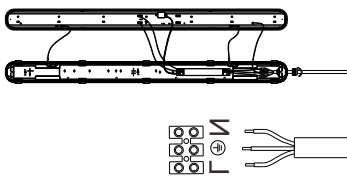


5. Connect wires from lamp side: Install the terminal strip on the side, then connect wires, L to L, N to N, GND to GND.

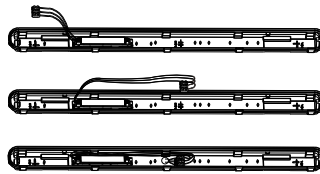

 
6. Connect wires from middle: Remove the terminal strip from side part, and install it to the middle, then connect wires, L to L, N to N, GND to GND.

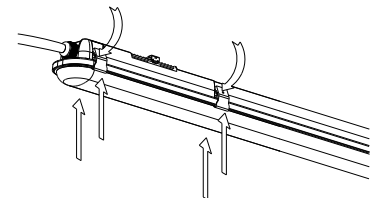

 7. Close the luminaire.

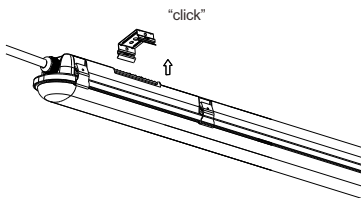

 8. Fix the luminaire with the brackets.

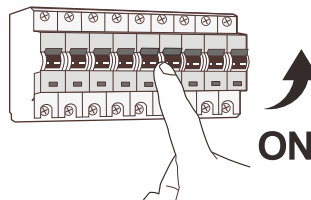

9. Switch off the power supply before installation.



10. Finish installation.

## Shenzhen ERS Technology

Factory Add: C209, Baohuasen International Center, Qianjin Second Road, Xixiang Town, Bao'an District, Shenzhen, China  
Warehouse Add: 57 Tarnard Dr, Braeside VIC 3195

Tel: 048 470 3010

Email: info@erstech.com.au



IPART  
Independent Pricing and Regulatory Tribunal  
New South Wales



Victorian  
Energy  
Upgrades



LM-80 TM 21 LM 79  
ISTMT LCP



## PACKING

Item No.	ERS-BR48/50/54/60W150E
Carton Size (mm)	1512X210X267
N.W.(KG)	
G.W. (KG)	
QTY/CTN	6

## Shenzhen ERS Technology

Factory Add: C209, Baohuasen International Center, Qianjin Second Road, Xixiang Town, Bao'an District, Shenzhen, China

Warehouse Add: 57 Tarnard Dr, Braeside VIC 3195

Tel: 048 470 3010

Email: info@erstech.com.au



**IPART**  
Independent Pricing and Regulatory Tribunal  
New South Wales



**LM-80 TM 21 LM 79**  
**ISTMT LCP**



**Victorian Energy Upgrades**



**ESSENTIAL SERVICES COMMISSION**