


LED Emergency Exit light Installation Guide

INSTALL

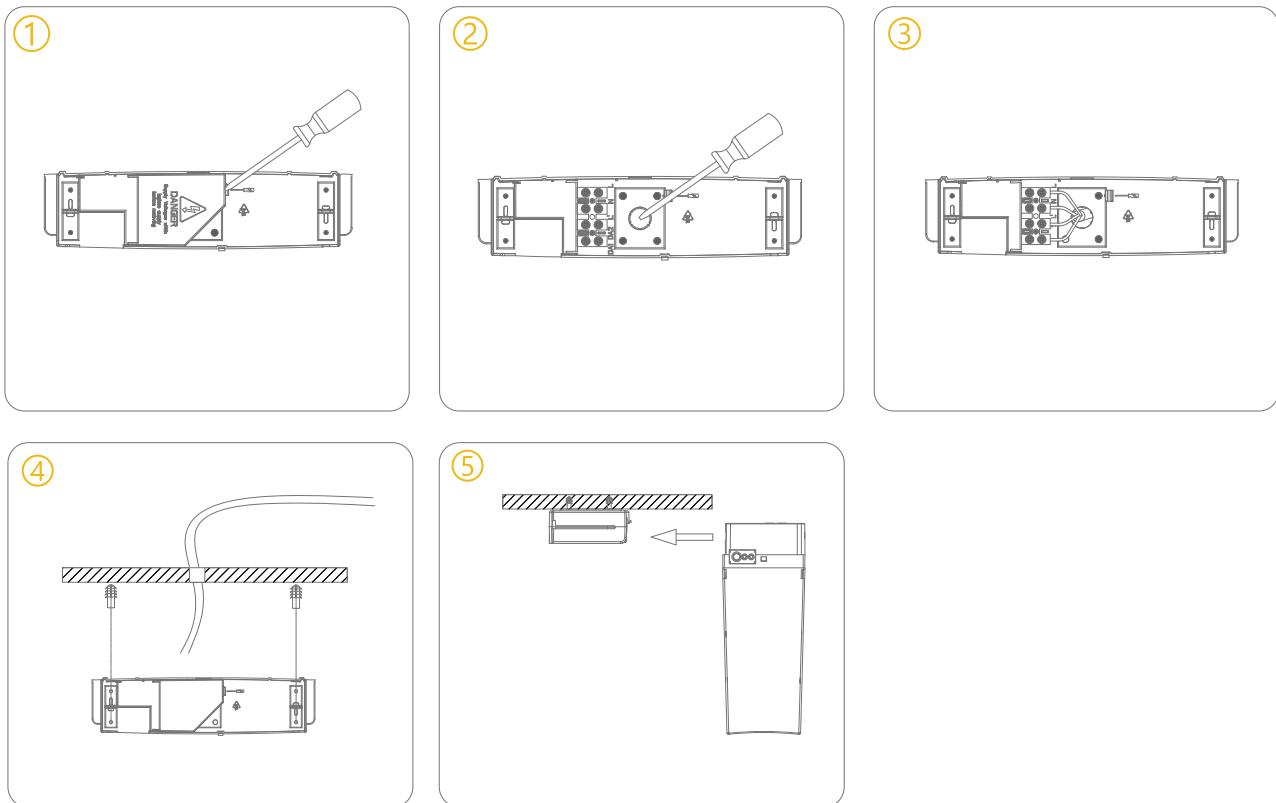

1. Open the cover of the wiring part in the base.
2. Knock the hole.
3. Connect the input wire according to the identification.
4. Fix the base of the lamp in the lamp in the ceiling.
5. Put the lamp body to the base. Completed.

Shenzhen ERS Technology

Factory Add: C209, Baohuasen International Center, Qianjin Second Road, Xixiang Town, Bao'an District, Shenzhen, China
Warehouse Add: 4-6 Kinder St Campbellfield vic3061 Australia

Tel: 048 470 3010

Email: info@erstech.com.au



IPART
Independent Pricing and Regulatory Tribunal
New South Wales



Victorian
Energy
Upgrades

3 year warranty

LM-80 TM 21 LM 79
ISTMT LCP

