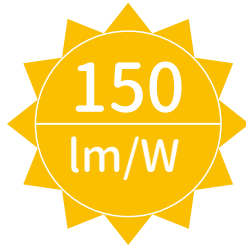# LED Tri-proof Batten Light with Sensor | 40W

150 lm/W

Motion+daylight sensor
Detection area: 2.5-4 metres
Hold on time: OFF/30s/10min/30min
With remote control

SAA APPROVALS

Victorian Energy Upgrades

3 year warranty

IPART
Independent Pricing and Regulatory Tribunal
New South Wales

LM-80   TM 21   LM 79
ISTMT   LCP

ESSENTIAL SERVICES COMMISSION

APPLICATION

Indoor and outdoor lighting,with IP65,it can be used at chick en farm,basement,car pariking, warehouses,corridors,outside of building,etc

SPECIFICATIONS

Item No.	ERS–BR40W120S
Product Size (mm)	1200X96X83
Power	40W
Lumen	6000lm
Sensor	Daylight & Microwave Motion Sensor, Sensing distance 2.5–4m
Input Voltage	AC220–240V, 50Hz
Opal Diffuser Material	PC
Body Material	PC
Body Colour	Grey
Clips	stainless steel clips
Driver Brand	ERS driver (3 years warranty)
Efficiency	150lm/w
LED Type	SMD 2835
CCT	3000K,4000K,5000K,5700K
CRI	Ra > 80
Power Factor	> 0.9
Beam Angle	120°
IP Rating	IP65
Working Temperature	−20℃~+45℃
Warranty	3 years

Victorian Energy Upgrades

3 year warranty

SAA APPROVALS

IPART
Independent Pricing and Regulatory Tribunal
New South Wales

LM-80   TM 21   LM 79
ISTMT   LCP

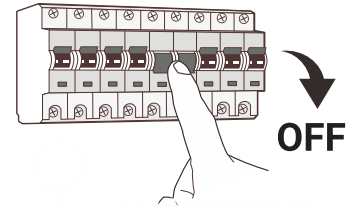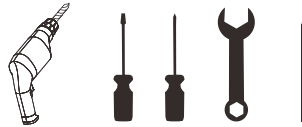ESSENTIAL SERVICES COMMISSION

LED MANUNAL INSTRTION

⚠ Safety Notice:

❶ Installation should be done by registered electricians.

❷ Before replacing the driver, please switch off the power supply and wait until it cools down completely.

❸ Never touch the working luminaire

❹ In any case of malfunction, switch off the power supply immediately, and do not try to repair it yourself.

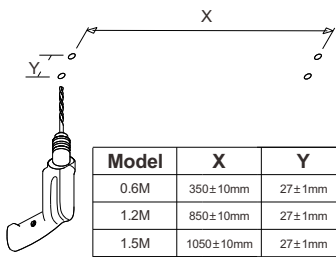❺ Repairment should only be done by registered electricians or official service agent.
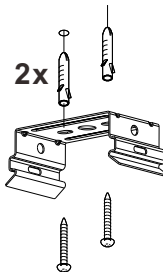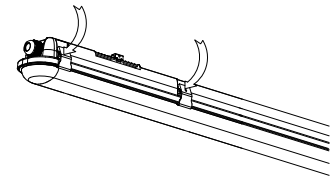
Include

x4   x4   x2   x1

Not Include

1. Switch off the power supply before installation.

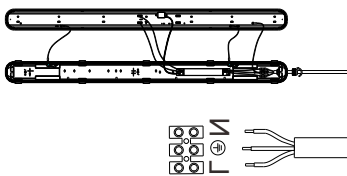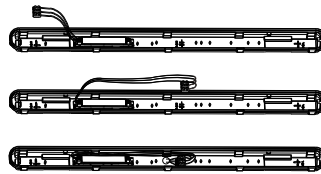| Model	X	Y
0.6M	350±10mm	27±1mm
1.2M	850±10mm	27±1mm
1.5M	1050±10mm	27±1mm

2.Drill a 6mm hole.

2x

3. According to the fixing hole centre, install expansion bolts and screws, install the bracket.
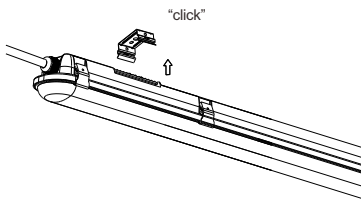
4. Unbuckle the clips, take out the diffuser.

5.Connect wires from lamp side:
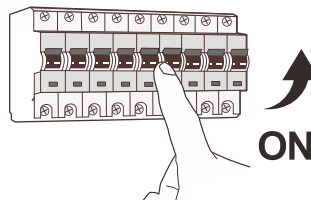Install the terminal strip on the side, then connect wires ,L to L, N to N, GND to GND.

6.Connect wires from middle:
Remove the terminal strip from side part, and install it to the middle, then connect wires,L to L, N to N, GND to GND.
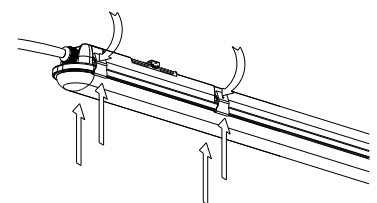
7.Close the luminaire.

"click"

8.Fix the luminaire with the brackets.

ON

9. Switch off the power supply before installation.

Light

10. Finish installation.

Shenzhen ERS Technology

Factory Add: C209, Baohuasen International Center, Qianjin Second Road, Xixiang Town, Bao'an District,Shenzhen, China

Warehouse Add: 57 Tarnard Dr, Braeside VIC 3195

Tel: 048 470 3010

Email: info@erstech.com.au

SAA APPROVALS

Victorian Energy Upgrades

3 year warranty

IPART
Independent Pricing and Regulatory Tribunal New South Wales

LM-80   TM 21   LM 79
ISTMT   LCP

ESSENTIAL SERVICES COMMISSION

PACKING

Item No.	ERS−BR16/20/24/36/40W120S
Carton Size (mm)	1212X210X267
N.W.(KG)	7
G.W. (KG)	8.9
QTY/CTN	6

LM-80 TM 21 LM 79
ISTMT LCP

DETAILS

Light: ON/OFF function of the lamp

Sensor: ON/OFF function of the Sensor

Hold time of current brightness

Daylight threshold

Brightness

Stand–by dimming level

Detection Range

| Reset | • | Test |

Light   Sensor
ON OFF   ON OFF

Power
100% 80% 50% 30%

Hold time
10s 1min 5min 30min

Stand-by dimming level
80% 50% 30% 0%

Daylight threshold   Range
Disable 50Lux   100% 75%

ERS tech

Victorian Energy Upgrades

3 year warranty

SAA APPROVALS

IPART
Independent Pricing and Regulatory Tribunal
New South Wales

LM-80   TM 21   LM 79
ISTMT   LCP

ESSENTIAL SERVICES COMMISSION